

Digital Color Cameras

 **PS 40 – 285 | 205 | 1020 CL**



The digital PS cameras have been designed especially for software integration.

The matching Kappa sdk3 offers a state-of-the-art software environment based on .net and C-API. In combination with the sdk or a detailed interface description the PS cameras convince as high-performance components in all measuring and testing machines.

The camera series is based on variable camera electronics, low power consumption and advanced circuitry, providing both an extremely rugged design and excellent signal quality.

The user can choose from a range of high-quality CCD sensors with megapixel resolution by Sony and Kodak.

As standard the series comes in a block housing, but for the individual touch it is also available in a striking hexagonal design housing.

The digital Kappa camera systems comply with the highest standards and offer

outstanding Kappa-specific technological highlights, such as rugged design, excellent highly linear signal quality, extraordinary signal-to-noise ratio, long-time exposure and, optionally, a second serial interface with bespoke configuration of functions. High frame rates are achieved by binning and partial scan, while the image size remains freely adjustable.

Real-time Color Signal Processing

The camera-internal color processing algorithm is FPGA-based and works independently of specific signal processors. Maximum true color rendition is achieved by adapting the color image reproduction for different lighting conditions to the sensor. Reproducibility of the results in other cameras is also ensured. Further features are high detail sharpness, edge enhancement, contrast enhancement and variable Gamma correction.



Digital camera
Color
CameraLink
12 bit digital signal processing
Progressive scan
Megapixel resolution
Up to 30 fps (full frames)
External trigger, reset/restart
Partial scan Binning
Gamma correction
Automatic functions
Long time integration
Cooled camera PS 40C – 285 CL

Sensor-specific data

PS 40 – 285 CL | PS 40C – 285 CL

CCD sensor	2/3" interline transfer CCD progressive scan with micro lenses (Sony ICX285AQ, EXview HAD)
Pixel size (H x V)	6.45 µm x 6.45 µm
Light-sensitive area (H x V)	8.93 mm x 6.66 mm
Number of pixels (H x V)	1434 x 1050, total
Spectral sensitivity (without IR-filter)	320 nm – 1100 nm, color: B = 470 nm, G = 540 nm, : R = 630 nm (peak sensitivity)
Full well capacity	23 000 e ⁻
A/D-conversion factor	5.6 e ⁻ / increment
Filter	RGB Bayer filter
Dynamic range	63 dB (measured in dark image, at 66 ms exposure time and 0 dB gain)
Sensitivity	(measured at 18 dB gain, gamma = 1, and 50 % level, 3000 K) 0.35 lx at 100 ms exposure time 0.00029 lx at 120 s exposure time 0.000029 lx at 20 min exposure time (Cooled camera PS 40C – 285 CL)

PS 40 – 205 CL

CCD sensor	1/2" interline transfer CCD progressive scan with micro lenses (Sony ICX205AK, EXview HAD)
Pixel size (H x V)	4.65 µm x 4.65 µm
Light-sensitive area (H x V)	7.6 mm x 6.2 mm
Number of pixels (H x V)	1434 x 1050, total
Spectral sensitivity (without IR-filter)	320 nm – 1100 nm, color: B = 470 nm, G = 540 nm, R = 630 nm (peak sensitivity)
Full well capacity	12 000 e ⁻
A/D-conversion factor	2.9 e ⁻ / increment
Filter	RGB Bayer filter
Dynamic range	55 dB (measured in dark image, at 66 ms exposure time and 0 dB gain)
Sensitivity	(measured at 18 dB gain, gamma = 1, and 50 % level, 3000 K) 0.61 lx at 100 ms exposure time 0.00051 lx at 120 s exposure time

PS 40 – 1020 CL

CCD sensor	2/3" interline transfer CCD progressive scan with micro lenses (Kodak KAI 1020 CM)
Pixel size (H x V)	7.4 µm x 7.4 µm
Light-sensitive area (H x V)	7.4 mm x 7.4 mm
Number of pixels (H x V)	1028 x 1008, total
Quantum efficiency	max. 41% at 470 nm
Spectral sensitivity (without IR-filter)	320 nm – 1000 nm, color: B = 470 nm, G = 535 nm, R = 620 nm (peak sensitivity)
Full well capacity	42 000 e ⁻
A/D-conversion factor	10.3 e ⁻ / increment
Readout noise	50 e ⁻ rms
Filter	RGB Bayer filter
Dynamic range	57 dB (measured in dark image, at 33 ms exposure time and 0 dB gain)
Sensitivity	(measured at 18 dB gain, gamma = 1, and 50 % level, 3000 K) 0.65 lx at 100 ms exposure time 0.00054 lx at 120 s exposure time

Kappa optronics GmbH

Kleines Feld 6
37130 Gleichen | Germany
Fon +49.5508.974.0
Fax +49.5508.974.100
info@kappa.de
www.kappa.de

Kappa optronics Inc.

825 Primrose Ave., Unit I
Monrovia, CA 91016 | USA
Fon +1.626.256.4343
Fax +1.626.256.6484
info@kappa-vision.com
www.kappa-vision.com

Interface-specific data

PS 40 – 285 CL | PS 40C – 285 CL

Color coding	YUV 4:2:2, RGB 24, Mono 16 (RAW data)		
Camera output format	full frame:	1430 x 1046 pixels, 15 fps	
	b/w-binning:	2 fold	4 fold 8 fold
	image size (pixels):	715 x 523	357 x 261 178 x 130
	frame rate:	25 fps	41 fps 62 fps
	partial scan:	image size freely adjustable	
Exposure	manual:	1 µs to 120 s (Cooled camera: up to 20 min)	
	automatic (AE):	1 µs to 66 ms at 1280 x 960 pixels	
Power supply	9-36 V DC, 3.2 W		

PS 40 – 205 CL

Color coding	YUV 4:2:2, RGB 24, Mono 16 (RAW data)		
Camera output format	full frame:	1430 x 1046 pixels, 15 fps	
	b/w-binning:	2 fold	4 fold 8 fold
	image size (pixels):	715 x 523	357 x 261 178 x 130
	frame rate:	25 fps	41 fps 62 fps
	partial scan:	image size freely adjustable	
Exposure	manual:	1 µs to 120 s	
	automatic (AE):	1 µs to 66 ms at 1280 x 960 pixels	
Power supply	9-36 V DC, 3.2 W		

PS 40 – 1020 CL

Color coding	YUV 4:2:2, RGB 24, Mono 16 (RAW data)		
Camera output format	full frame:	1024 x 1004 pixels, 30 fps	
	b/w-binning:	2 fold	4 fold 8 fold
	max. size (pixels):	512 x 502	256 x 251 128 x 125
	frame rate:	36 fps	60 fps 90 fps
	partial scan:	image size freely adjustable	
Exposure	manual:	1 µs to 120 s	
	automatic (AE):	1 µs to 33 ms at 800 x 600 pixels	
Power supply	9-36 V DC, 3 W		




Signal processing | Development tool

Development tool	software development kit, Kappa sdk3 (.Net-class library/C-function library, API) order-no.: 771-5757
System	12 bit digital
Gain	manual/automatic (AGC): 0 to 18 dB
Enhancement	contrast: 1.0 to 8.0 fold
	brightness: subtraction, 0 to 4095 LSB, maximum 50% of the output level
	edges: adjustable
Color processing	type of light source, color balance (RGB), automatic white set, color saturation
Gamma	0.3 to 2.2
Diagnostics	camera name, serial number, revision number, temperature of sensor and camera, built-in test, image size, frame rate, test pattern
Line generator	2 reticles: position, color and style adjustable
Measuring window	position and size adjustable
Synchronization	internal/external, reset/restart (delay <10 µs)
Hardware Trigger	Minimum trigger delay 4.2µs - 8.2µs depending on the sensor type Frame on Demand
Software Trigger	via SDK 3

General Technical Data

Interfaces	CameraLink connector system connector (power supply, additional RS 232, control and trigger signals)	
Lens mount	C-mount, focal plane adjustable, CS-mount on request	
Filter	IR-filter, removable	
Temperature	operating temperature -20°C to +60°C, storage temperature -30°C to +70°C	
Dimensions Weight	block housing: 60 x 60 x 47 mm; 235 g design housing: diameter 75 mm, length 41 mm; 370 g cooled camera: 73 x 69 x 107 mm; 820 g	
Cable length	CameraLink up to 10 m (other cable length on request)	
System requirements	hardware: bus master enabled PCI slot (or PCMCIA type 2 CardBus interface), minimum 1.8 GHz, minimum 512 MB RAM, DirectX9-enabled graphic card with at least 64 MB operating system: Microsoft Windows 2000 ®, Microsoft Windows XP ® (32 Bit Edition), Microsoft Windows Vista ® (32 Bit Edition)	
Order-no. block housing	PS 40-285 CL	963-1710
	PS 40-205 CL	963-1711
	PS 40-1020 CL	963-1700
Order-no. design housing (yellow)	PS 40-285 CL	963-1710G
	PS 40-205 CL	963-1711G
	PS 40-1020 CL	963-1700G
Order-no. Cooled camera	PS 40C-285 CL	963-1716
Standard equipment	camera	
In addition for cooled version	power supply ACC 2 (incl. control cable 4 m and power supply cable)	

Spectral Sensitivity Characteristics (without IR-filter)

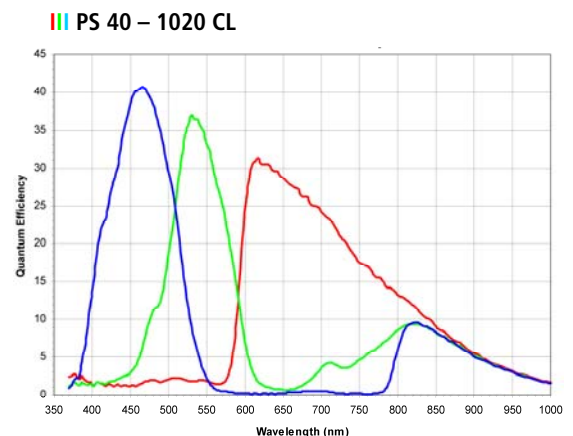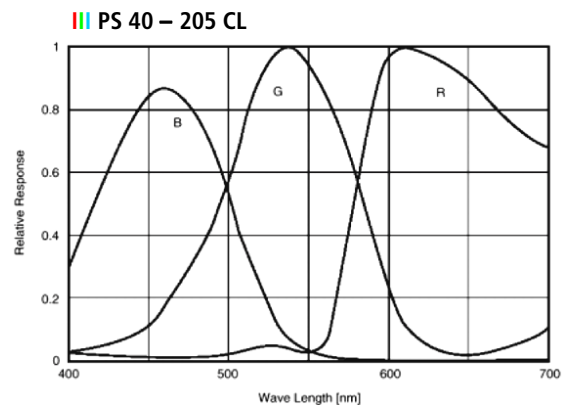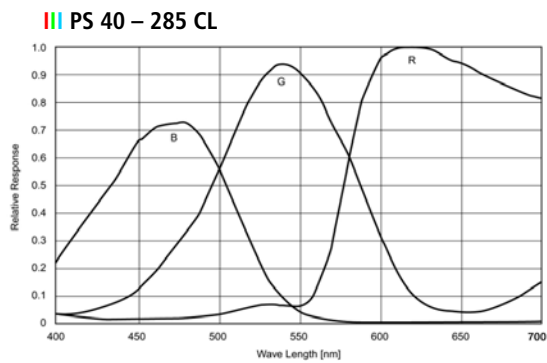

We are constantly checking the accuracy of the technical data. We are prepared to provide more detailed information on request. Technical data are subject to change without notice!

Kappa optronics GmbH

Kleines Feld 6
37130 Gleichen | Germany
Fon +49.5508.974.0
Fax +49.5508.974.100
info@kappa.de
www.kappa.de

Kappa optronics Inc.

825 Primrose Ave., Unit I
Monrovia, CA 91016 | USA
Fon +1.626.256.4343
Fax +1.626.256.6484
info@kappa-vision.com
www.kappa-vision.com